



Installation


(Professional installation recommended)

Tools Required:

- **Drill motor**
- **1/4" Drill bit**
- **Phillips Head Driver**

Installation Kit:

- **(4) T-Nuts**
- **(4) 8-32 Machine Screws**

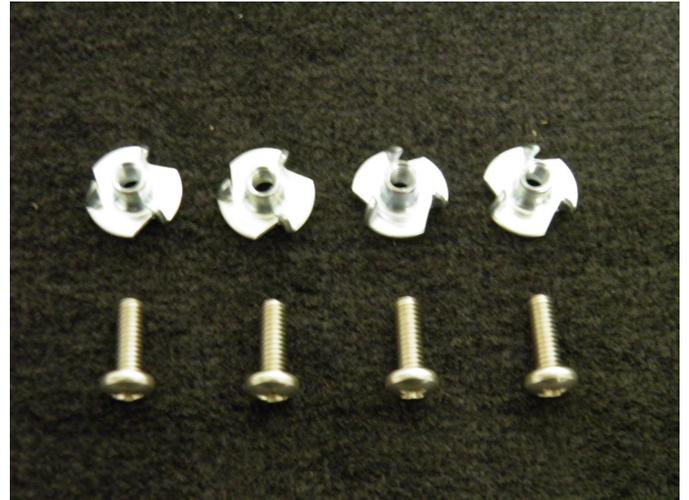

Place floor mat in car in position.

Place Heel plate on mat and locate to your preference.

Put a piece of tape on the mat just below the heel plate.

Put another piece of tape on the mat just to the side of the heel plate.

Remove plate and mat.

Place mat on piece of wood - and place heel plate in position on mat.

Use 1/4 drill bit (.250) and drill (4) holes through mat.


We suggest using the 2nd hole in from each corner.

Remove plate from mat - clean mat and plate.

Install plate using the screws supplied and T-nuts on the back.

Do not over tighten.

Suggested Mounting Point

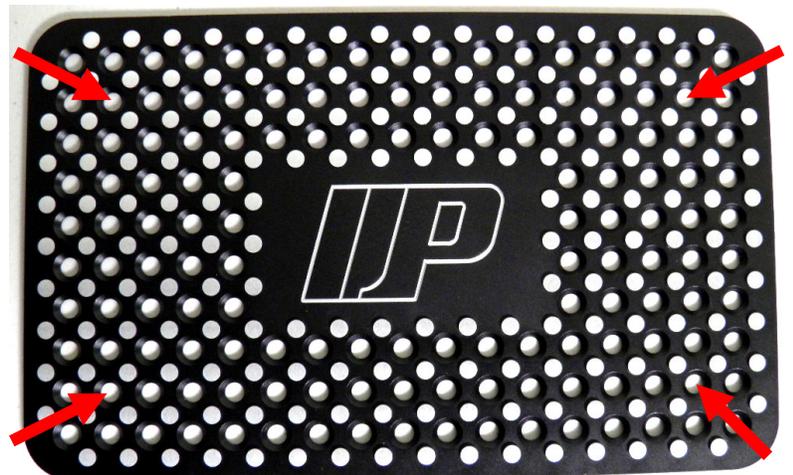

If you have any questions about install, email us at pedalsales@bmwpedals.com